




The process of impregnating timber and panels with Burnblock®

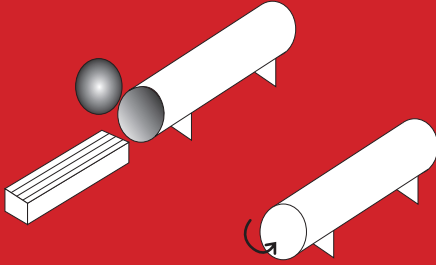


The packages are placed in the autoclave.

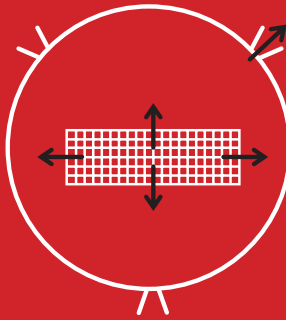


The packages are submitted to a prevacuum, which opens its cells.

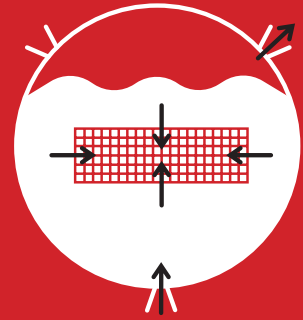


The autoclave is filled with the fire retardant liquid.

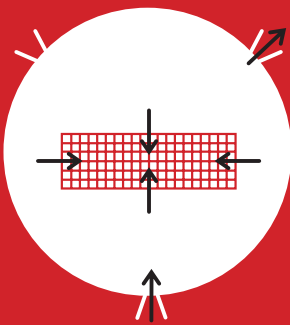



The packages are impregnated with the liquid under very high pressure.

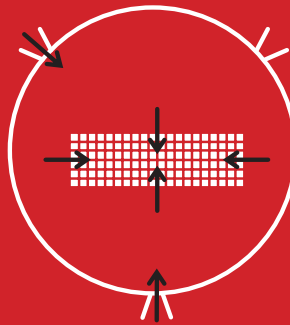

Burnblock® is now present in the timber/panels.

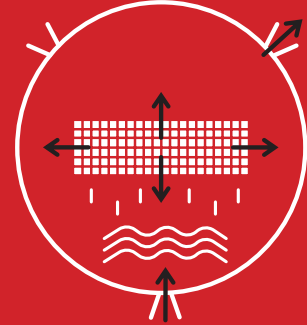

The packages are submitted to a postvacuum, removing excessive moisture.

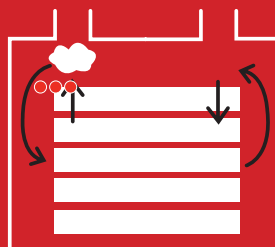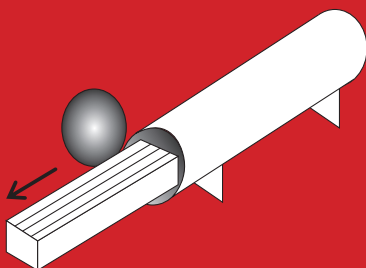

The packages are dried to the desired moisture content. Once the process is completed, we obtain a product of the highest quality that can be applied both indoors and outdoors.